


MS T&T CLEANER

FOAM KIT INSTRUCTIONS




FOAM KIT A

1. Thread the 1/4" Male Thread Plug (B) into the back of the Foam Gun (A).
2. Attach this unit to the quick coupler located on the end of your wash wand.

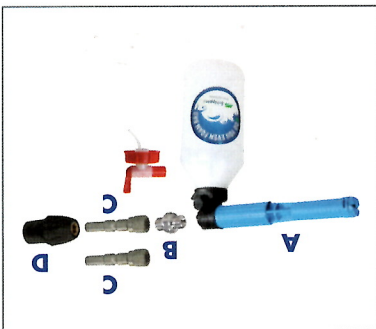

FOAM KIT B

1. Wrap all the threaded ends with the teflon tape provided.
2. Thread the adapter (B) into the brass end on the foam canister (A)
3. Thread one of the quick connect couplings (C) onto the adapter (B)
4. Thread the Quick connector (D) onto your existing nozzle
5. (This end has a 1/4" female thread)
6. Thread the 2nd quick connect coupling (C) onto your existing pressure washer wand (This end has a 1/4" male thread)

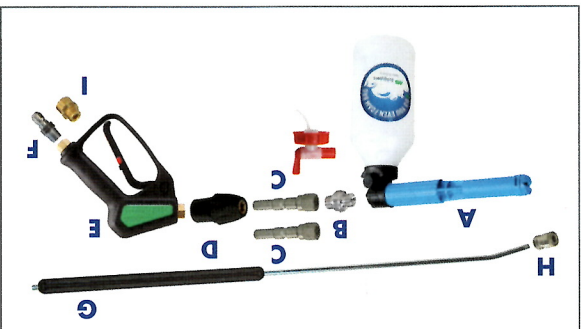

FOAM KIT C

1. Wrap all the threaded ends with the teflon tape provided.
2. Thread the adapter (B) into the brass end on the foam canister (A)
3. Thread one of the quick connect couplings (C) onto the adapter (B)
4. Thread the Quick connector (D) onto the Trigger (E)
5. Thread the Plug (F) onto the base of the Trigger (E)
6. Thread the 2nd quick connect coupling (C) onto the Wash Wand (G)
7. To attach the now extended foam gun (A+B+C), simply pull back the front of the Quick Connector (D), insert the quick connect coupling (C), then release. You should hear a "Click" when they are properly connected.
8. Thread the plug (F) or (I) onto the base of the Trigger (E). You will need a quick connect coupler on the end of your pressure washer hose (Not Included), you can then attach the hose to the plug (F).
9. Thread the Quick Coupler 1/4" Female thread (H) onto the end of the Wash Wand (G).
10. Your foaming unit is now correctly hooked up to your pressure washer system. Please see the T&T instructions for proper foam application.



MS T&T CLEANER

DO'S & DON'TS

Follow the guidelines below for best results. MS T&T Cleaner is a biodegradable product, making it safe for a variety of applications including trucks, tractors, boats, combines and more!

DO

- Use 100% concentration.
- Use cold water to apply foam.
- Set your foam gun dial between 2 and 4 for best results in application.
- Apply an even, thin layer of foam. When application is too thick, the foam will run.
- Allow foam to soak for about 5 minutes.
- Wash from the bottom up to ensure maximum adhesion to dirt and grime.
- Clean a small test spot on new surfaces.

DON'T

- Don't wash in direct sunlight or on hot days.
- Optimal washing temperature is between 15°C and 25°C/60°F and 75°F.
- Don't foam polished aluminum without pre-rinsing. Use caution when washing polished surfaces.
- Don't allow soap to dry on vehicles and equipment. Wash in stages if this is a concern.
- Don't store below 5 Celsius

PRESSURE WASHER REQUIREMENTS

- Minimum: 1100 psi
- Ideal: 1500 psi
- Maximum: 3000 psi; 6 US gallons per minute or 22 L per minute (if higher, contact your local dealer or Schippers Canada for guidance.)

MS Schippers

MS Schippers Canada

120 - 27211 Highway 12

Lacombe County, AB T4L 0E3

T: 1-866-995-7771 • sales@schippers.ca

www.schippers.ca • www.doyouenfoampro.com